


26. ANTI LOCK BRAKE SYSTEM (ABS)


1) POWER SUPPLY, WHEEL SPEED SENSOR & OIL FEEDING CONNECTOR CIRCUIT

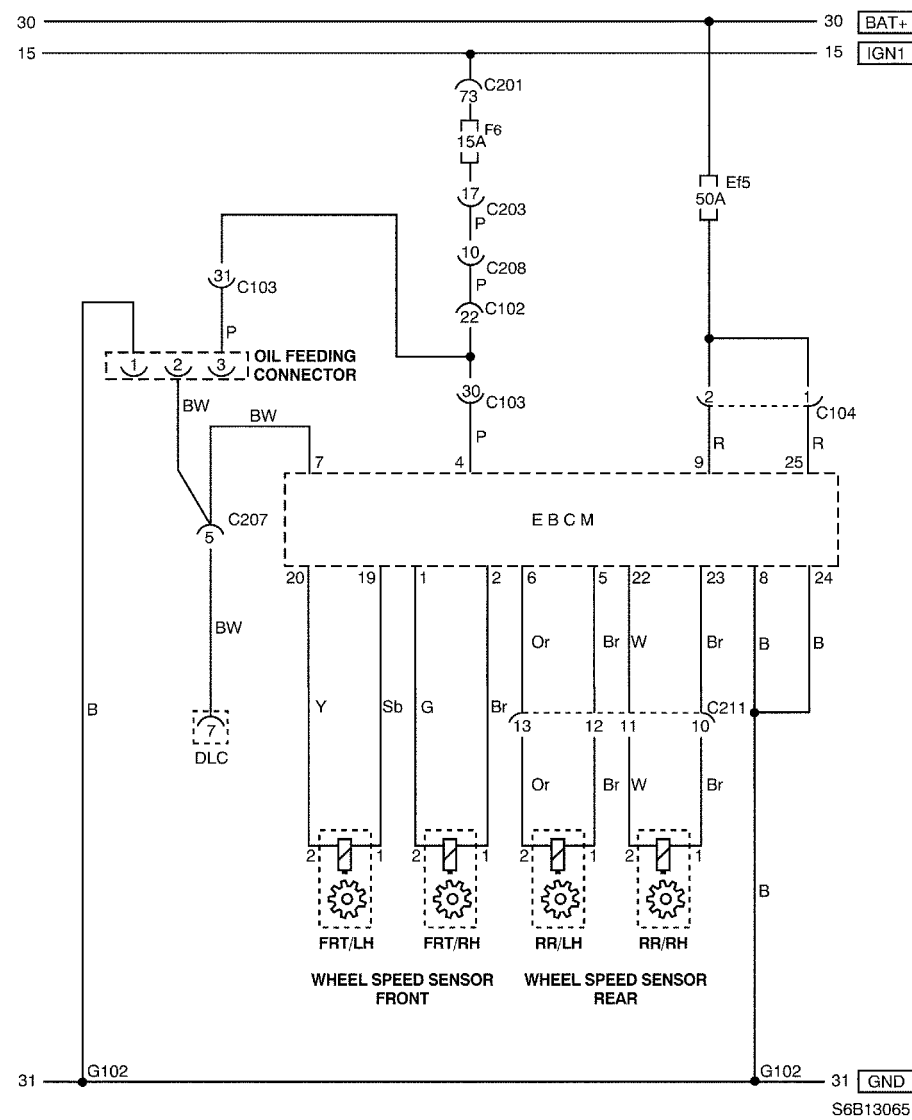

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C103 (32 Pin, Brown)	Front – Engine Fuse Block	Engine Fuse Block
C104 (2 Pin, Colorless)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C208 (20 Pin, Yellow)	Front – I.P	Front TCM
C211 (15 Pin, Yellow)	Front – Floor	Under Left A Pillar
G102	Front	Behind Left Headlamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

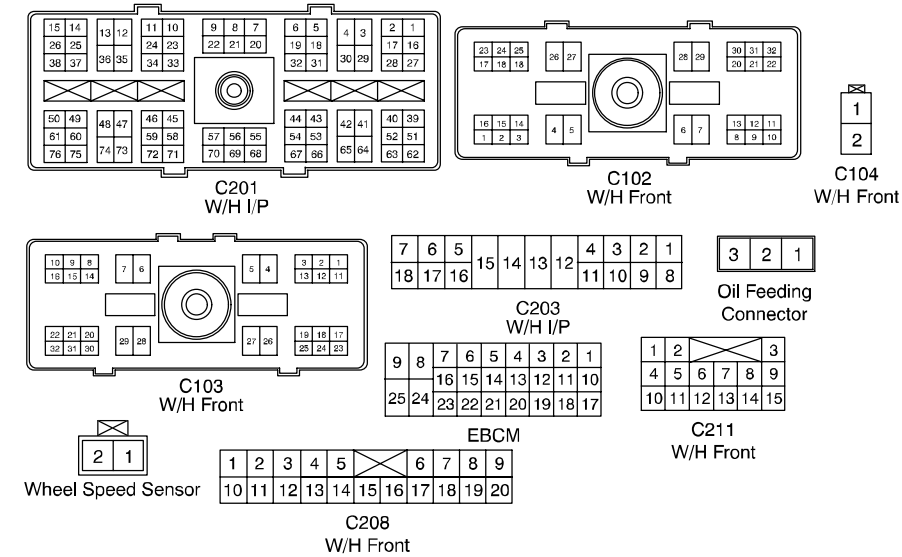


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

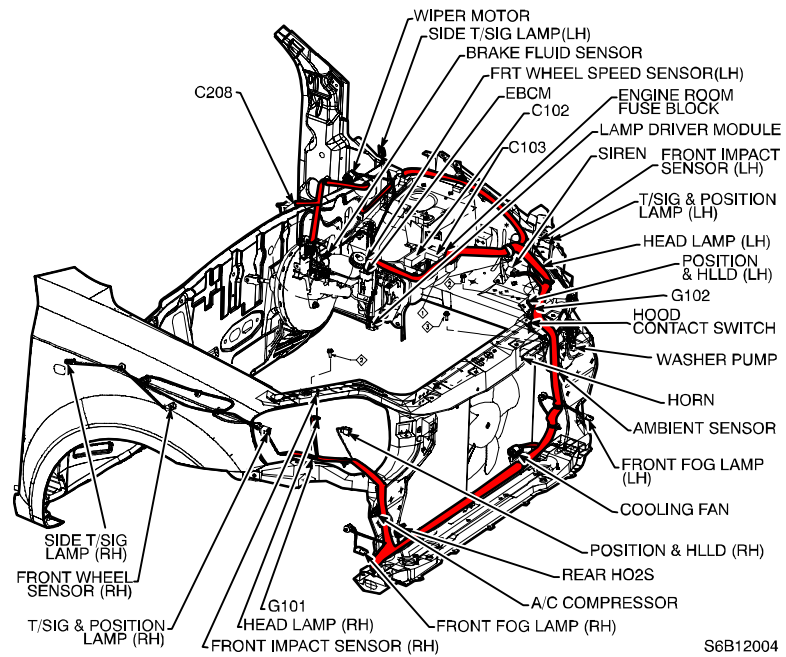


- W/H I/P

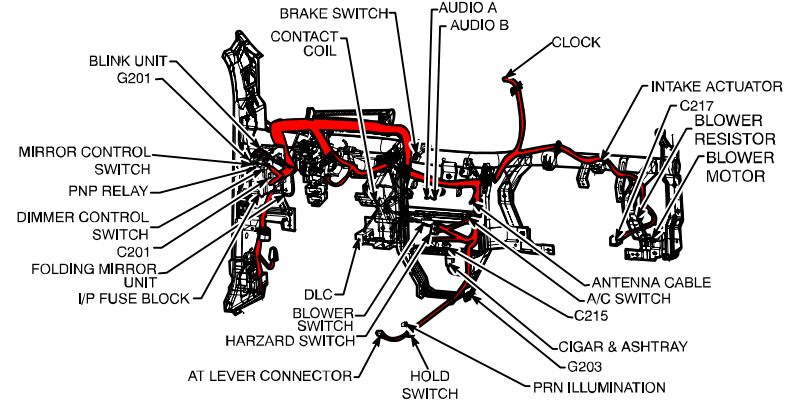

S6B12001


2) ABS DRIVER LAMP MODULE, PARKING BRAKE, BRAKE FLUID SWITCH & WARNING(ABS,BRAKE)LAMP CIRCUIT

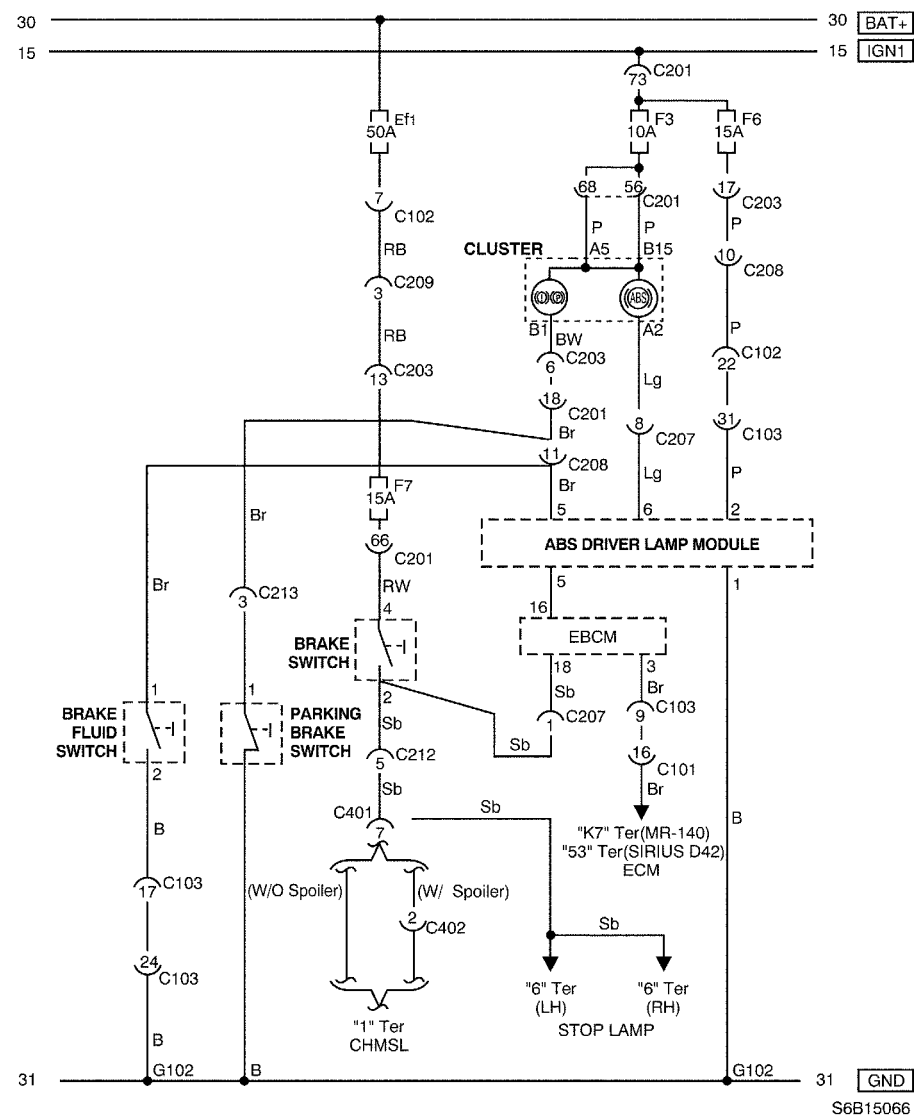

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (32 Pin, Black)	Engine – Engine Fuse Block	Engine Fuse Block
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C103 (32 Pin, Brown)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C207 (12 Pin, Gray)	Front – I.P	Below I.P Fuse Block
C208 (20 Pin, Yellow)	Front – I.P	Front TCM
C212 (11 Pin, Blue)	I.P – Floor	Under Left A Pillar
C402 (6 Pin, White)	Trunk Lid – Floor	Below Back Shelf Panel
G102	Front	Behind Left Headlamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

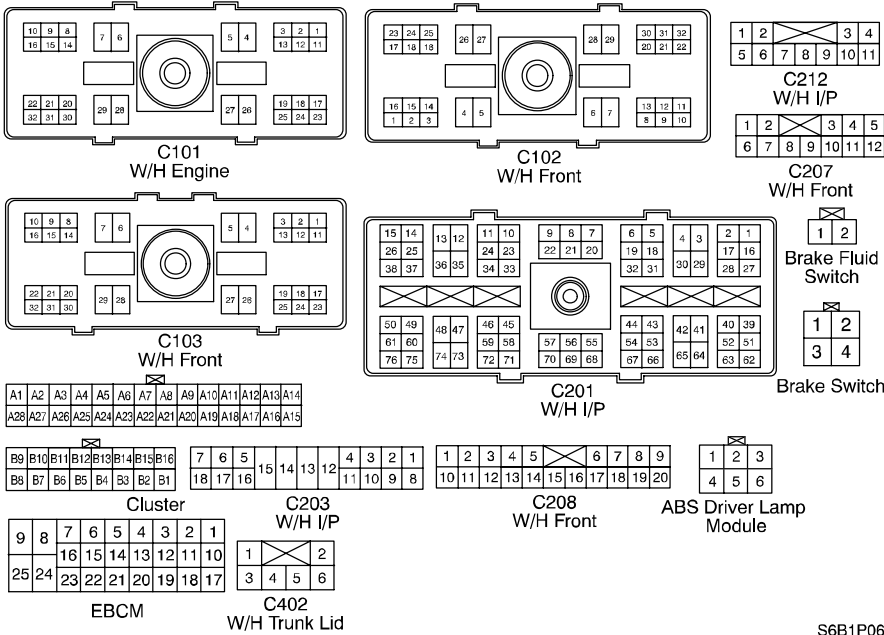


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

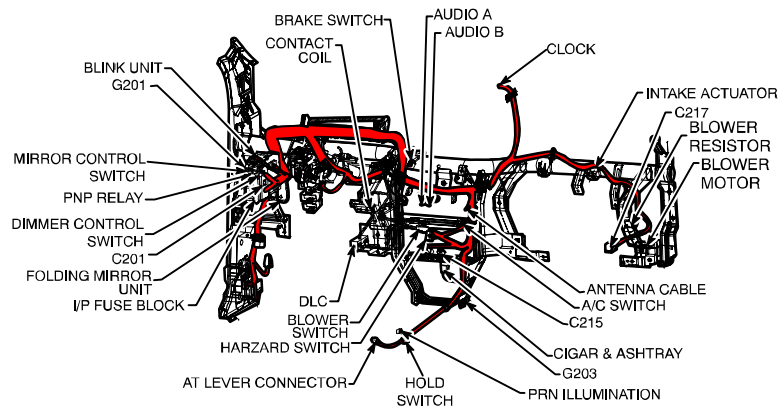


• W/H TRUNK LID

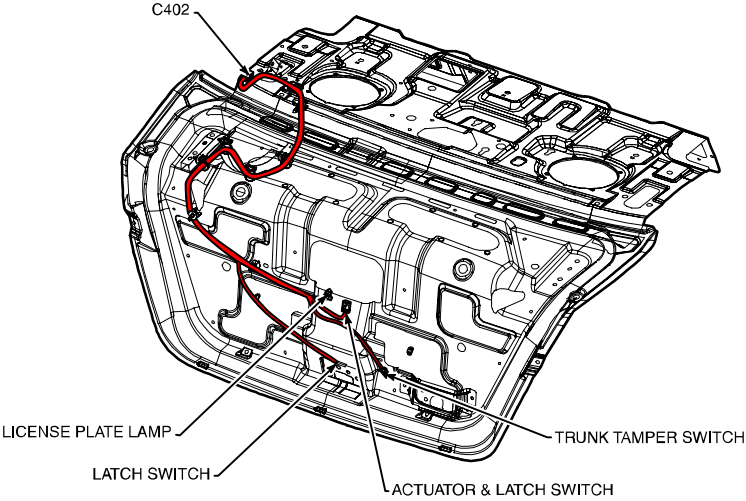

S6B12001

S6B12011

• W/H FRONT

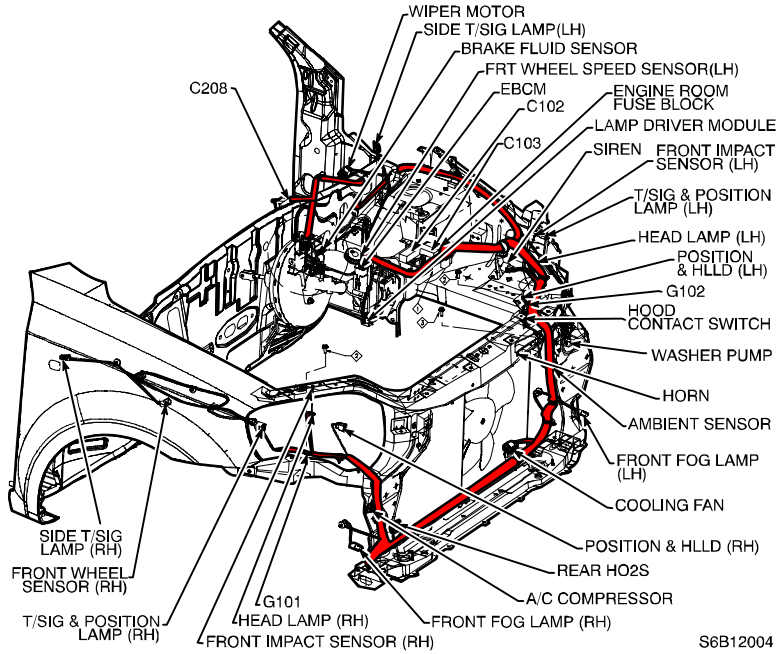

S6B12004