


23. CLUSTER


1) TACHOMETER, FUEL GAUGE & COOLANT TEMPERATURE GAUGE : SIRIUS D42

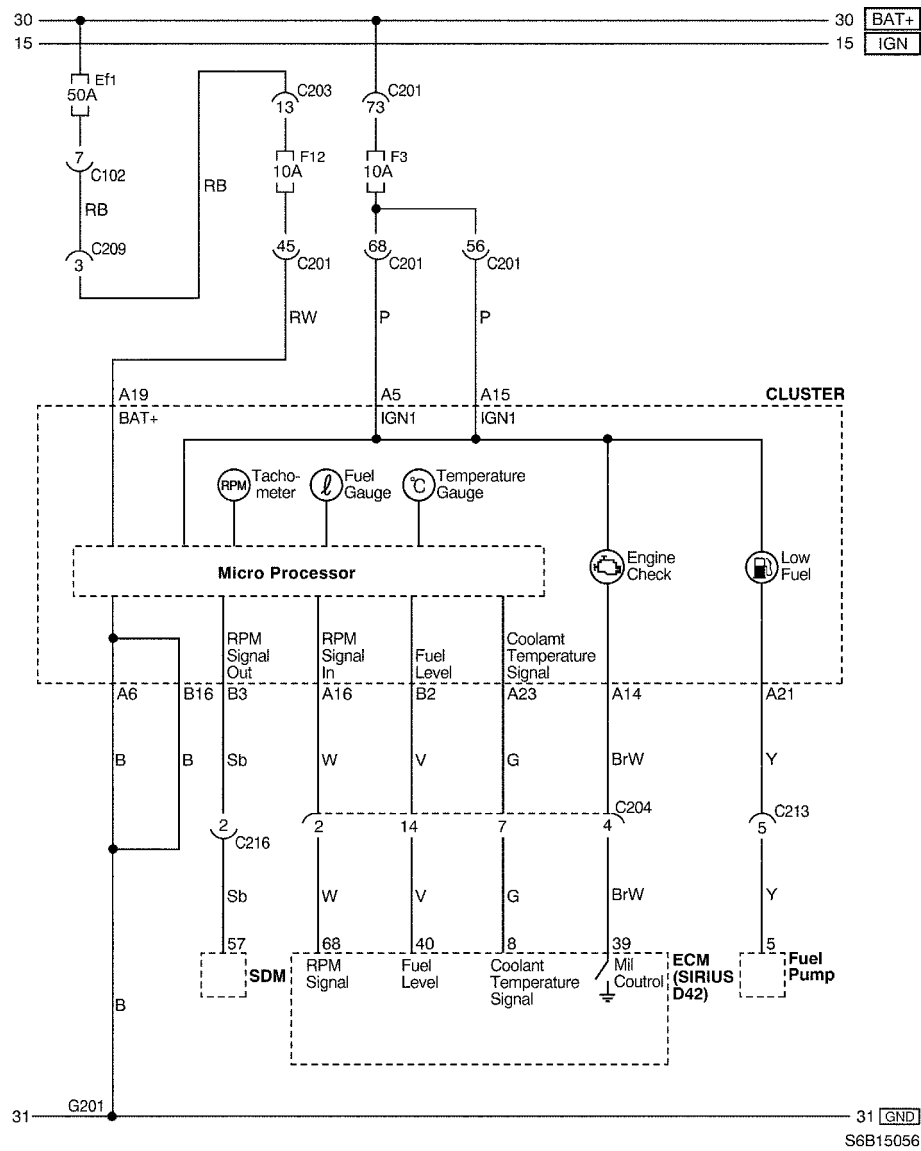

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C209 (4 Pin, White)	Front – I.P	Front TCM
C213 (20 Pin, White)	I.P – Floor	Under Left A Pillar
C216 (12 Pin, White)	Air Bag – I.P	Behind Airconditioner
G201	I.P	Upper Mirror Control Switch

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

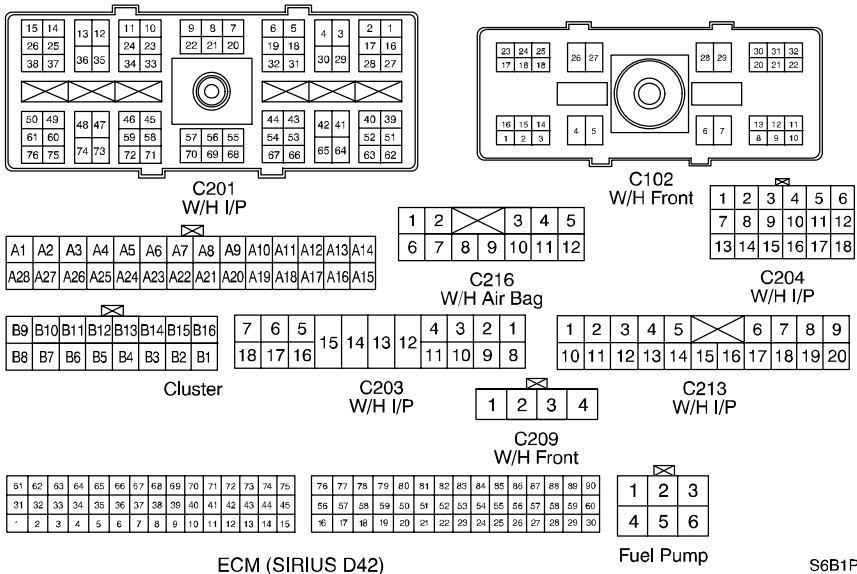


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

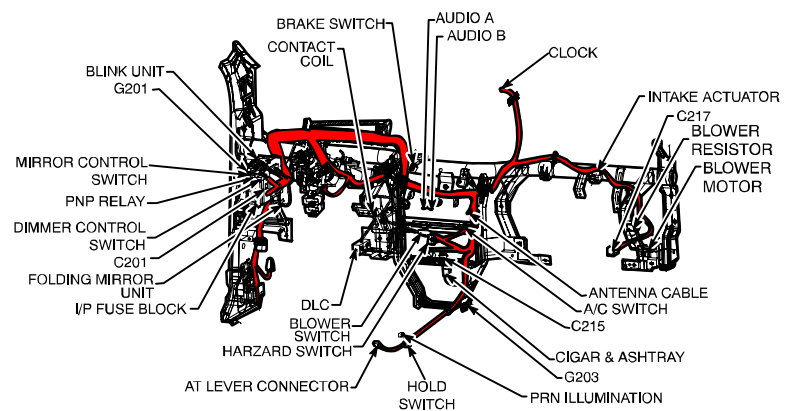


S6B12001

• W/H ENGINE

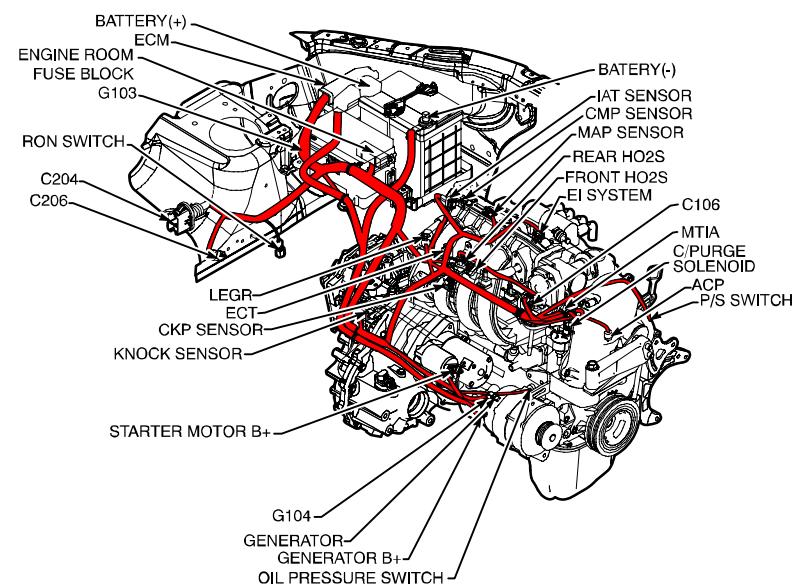

S6B12002


2) TACHOMETER, FUEL GAUGE & COOLANT TEMPERATURE GAUGE : MR140

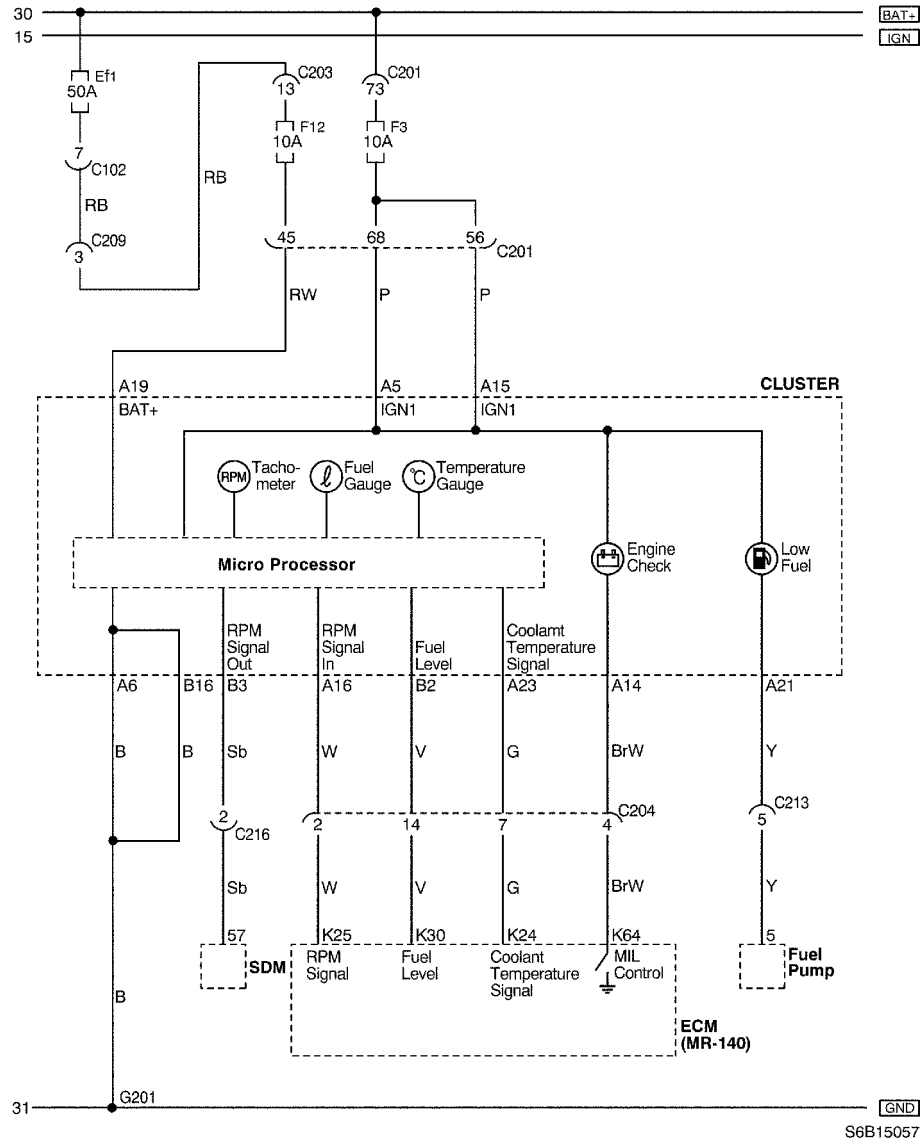

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C209 (4 Pin, White)	Front – I.P	Front TCM
C213 (20 Pin, White)	I.P – Floor	Under Left A Pillar
C216 (12 Pin, White)	Air Bag – I.P	Behind Airconditioner
G201	I.P	Upper Mirror Control Switch

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

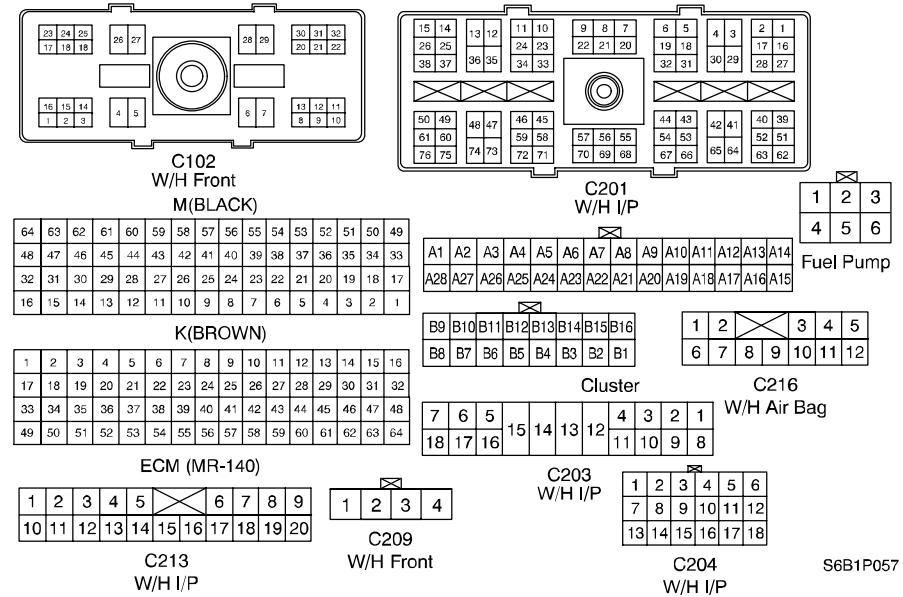


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

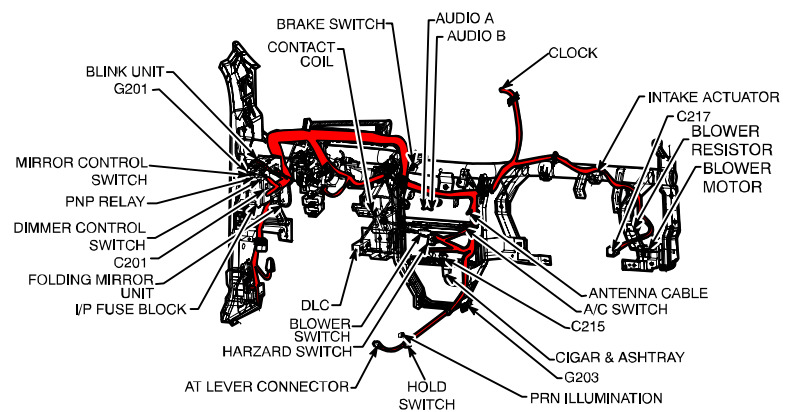


S6B12001

• W/H ENGINE

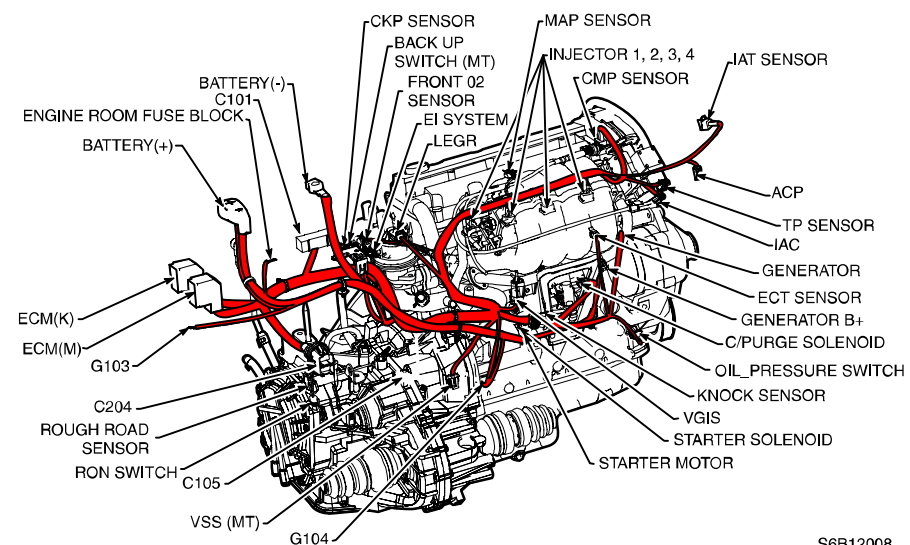

S6B12008


3) TACHOMETER, FUEL GAUGE & COOLANT TEMPERATURE GAUGE : HV240

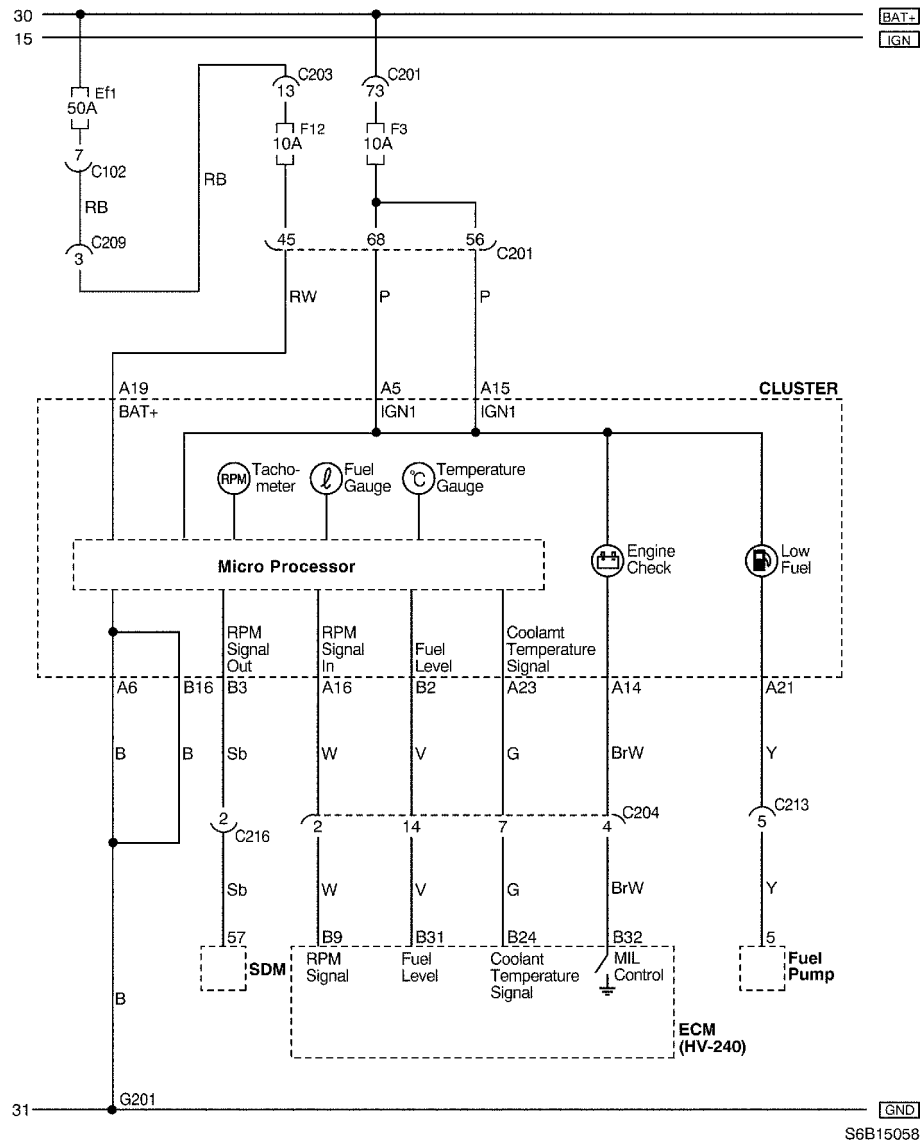

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C209 (4 Pin, White)	Front – I.P	Front TCM
C213 (20 Pin, White)	I.P – Floor	Under Left A Pillar
C216 (12 Pin, White)	Air Bag – I.P	Behind Airconditioner
G201	I.P	Upper Mirror Control Switch


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

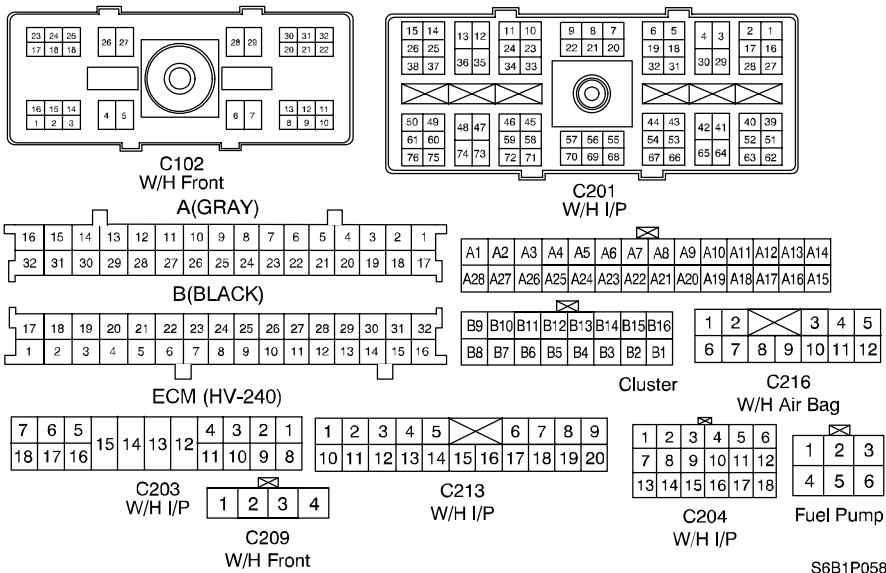

S6B1P058


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

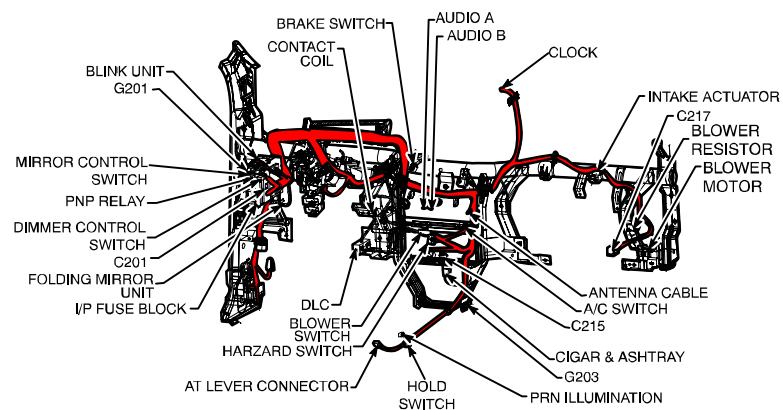


S6B12001

• W/H ENGINE

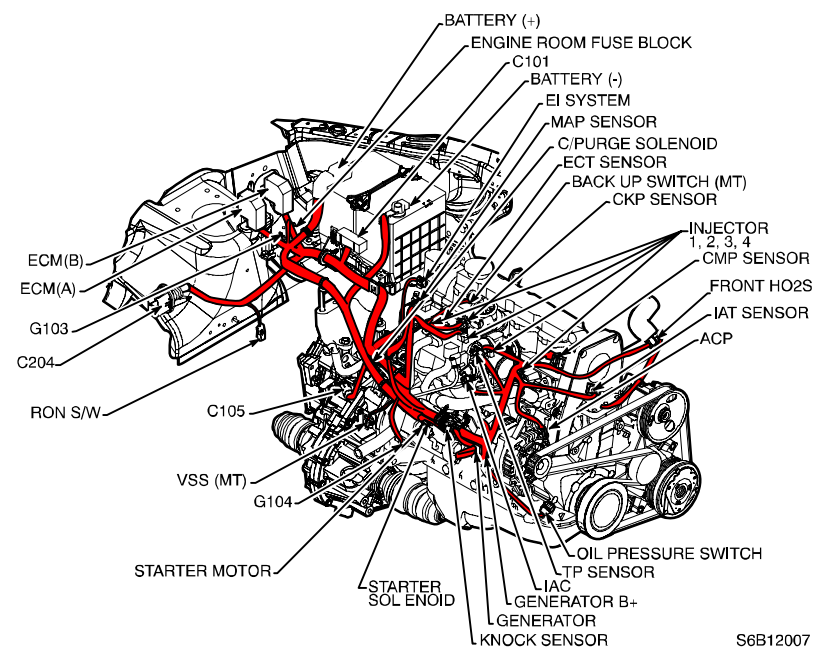

S6B12007


4) SPEEDOMETER & AMBIENT TEMPERATURE INDICATOR

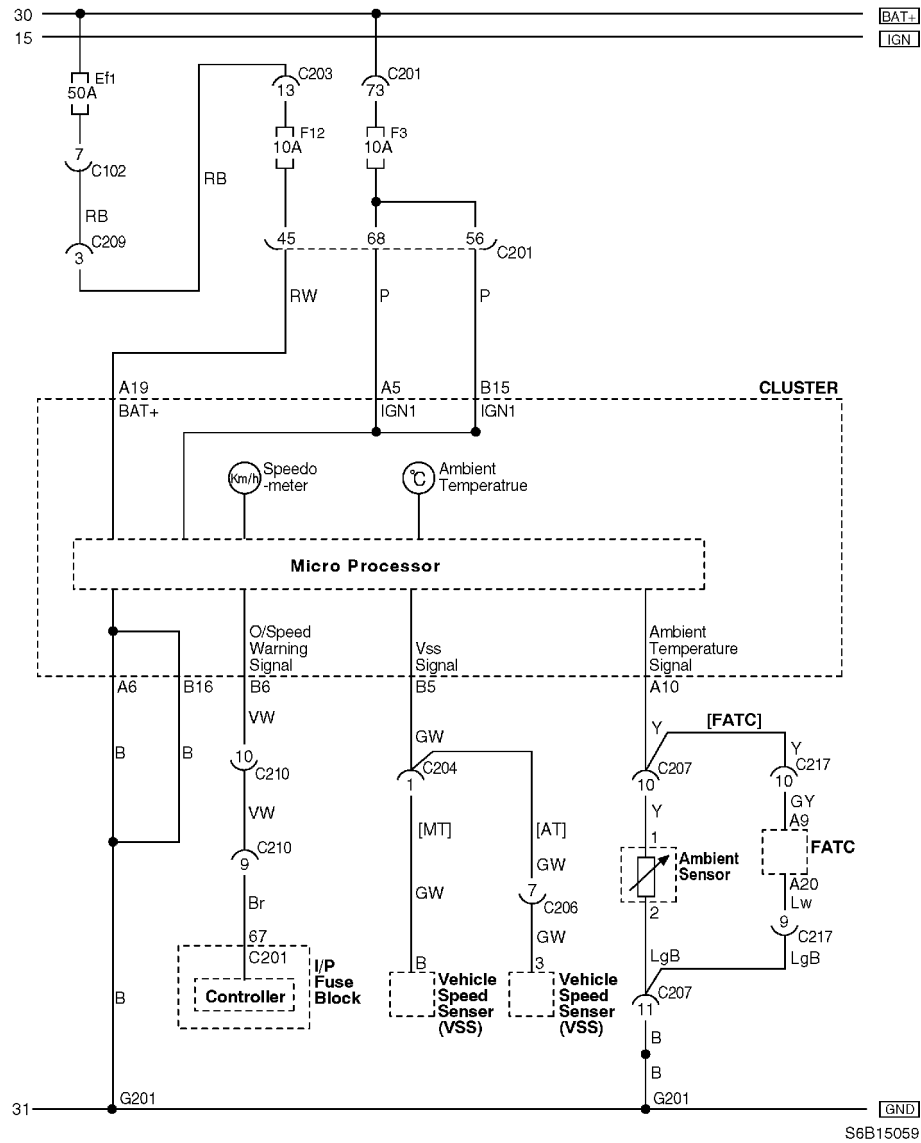

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C207 (12 Pin, Gray)	Front – I.P	Below I.P Fuse Block
C209 (4 Pin, White)	Front – I.P	Front TCM
C217 (16 Pin, White)	I.P – FATC	Under Blower Motor
G201	I.P	Upper Mirror Control Switch

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

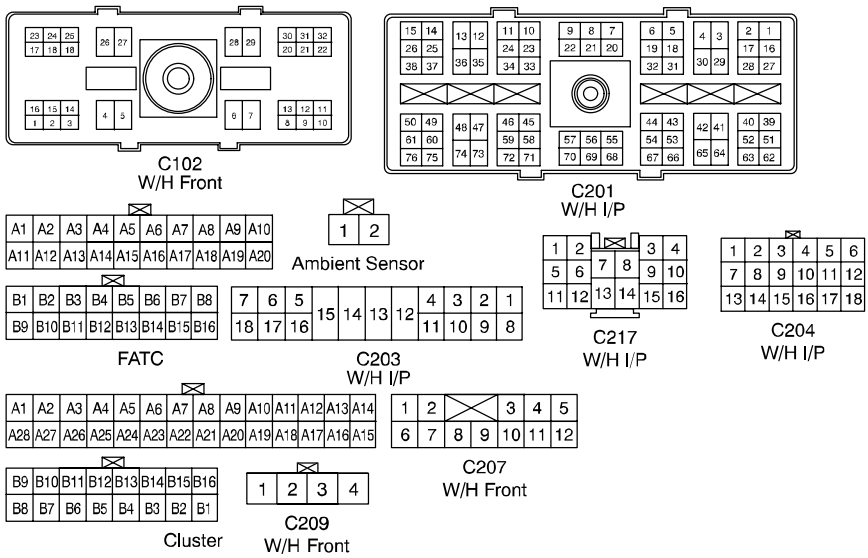


c. POSITION OF CONNECTORS AND GROUNDS

- W/H I/P

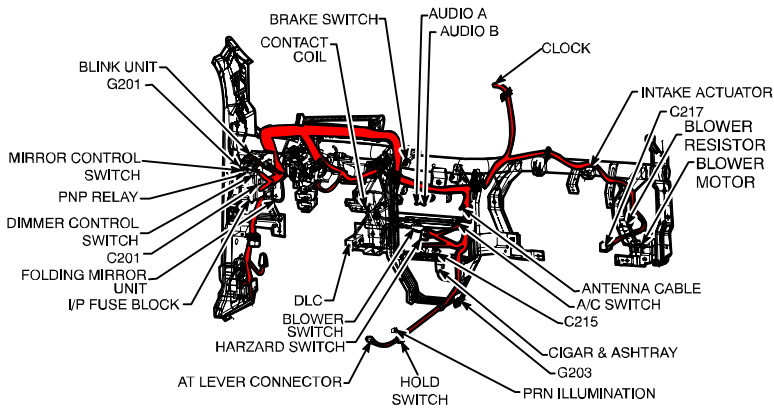

S6B12001

- W/H FRONT

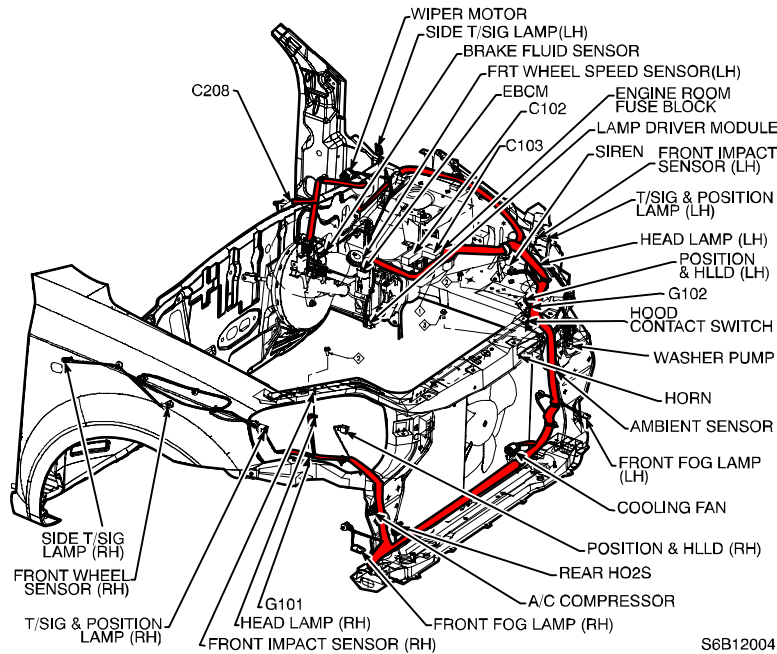

S6B12004



CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C206 (10 Pin, White)	TCM – I.P	Below TCM
C207 (12 Pin, Gray)	Front – I.P	Below I.P Fuse Block
C216 (12 Pin, White)	Air Bag – I.P	Behind Airconditioner
G301	Floor	Under Right Seat Cushion

Air Bag Module (SDM)

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
26	25	24	23	22	21	20	19	18	17	16	15	14	13	12
38	37	36	35	34	33	32	31	30	29	28	27	26	25	24
50	49	48	47	46	45	44	43	42	41	40	39	38	37	36
61	60	59	58	57	56	55	54	53	52	51	50	49	48	47
76	75	74	73	72	71	70	69	68	67	66	65	64	63	62

C201 W/H I/P

A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15
A28	A27	A26	A25	A24	A23	A22	A21	A20	A19	A18	A17	A16	A15	A14
B9	B10	B11	B12	B13	B14	B15	B16	B8	B7	B6	B5	B4	B3	B2
B8	B7	B6	B5	B4	B3	B2	B1							

Cluster

1	2	3	4	5	6	7	8	9	10
5	6	7	8	9	10				

C206 W/H TCM

1	2	3	4	5	6	7	8	9	10
13	14	15	16	17	18				

C216 W/H Air Bag

1	2	3	4	5	6	7	8	9	10	11	12
6	7	8	9	10	11	12					


C204 W/H I/P

1	2	3	4	5	6	7	8	9	10	11	12
6	7	8	9	10	11	12					

C207 W/H Front


c. POSITION OF CONNECTORS AND GROUNDS

- W/H I/P

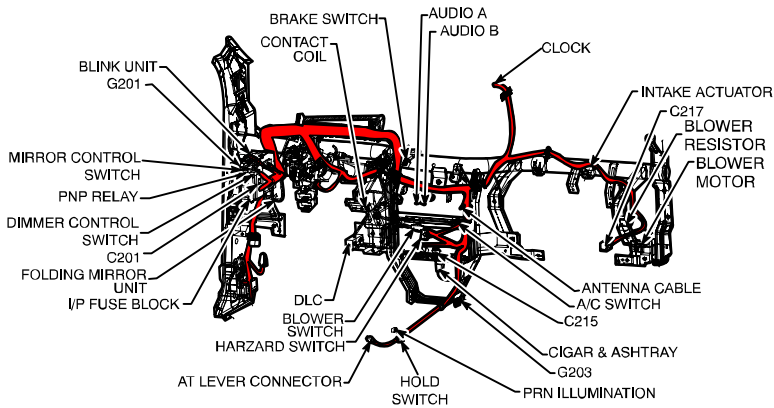


S6B12001

- W/H AIRBAG

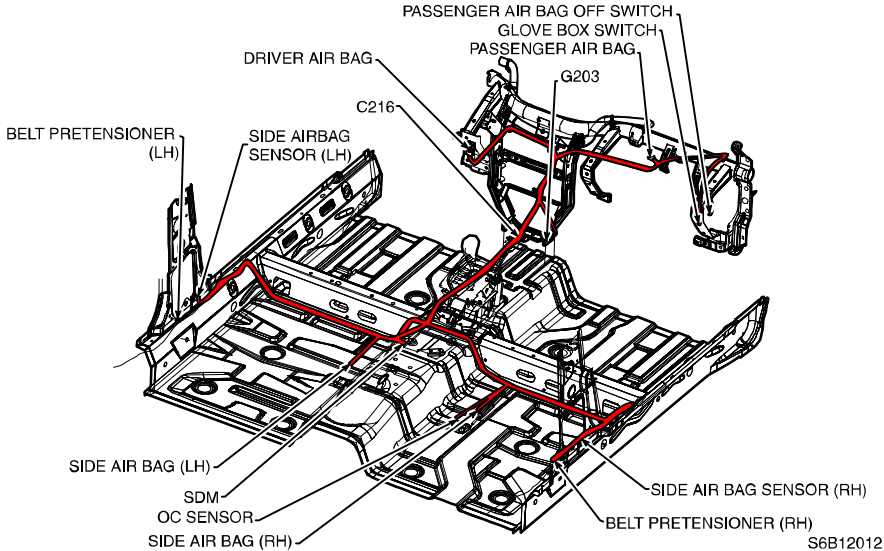

S6B12012


6) WARNING INDICATORS

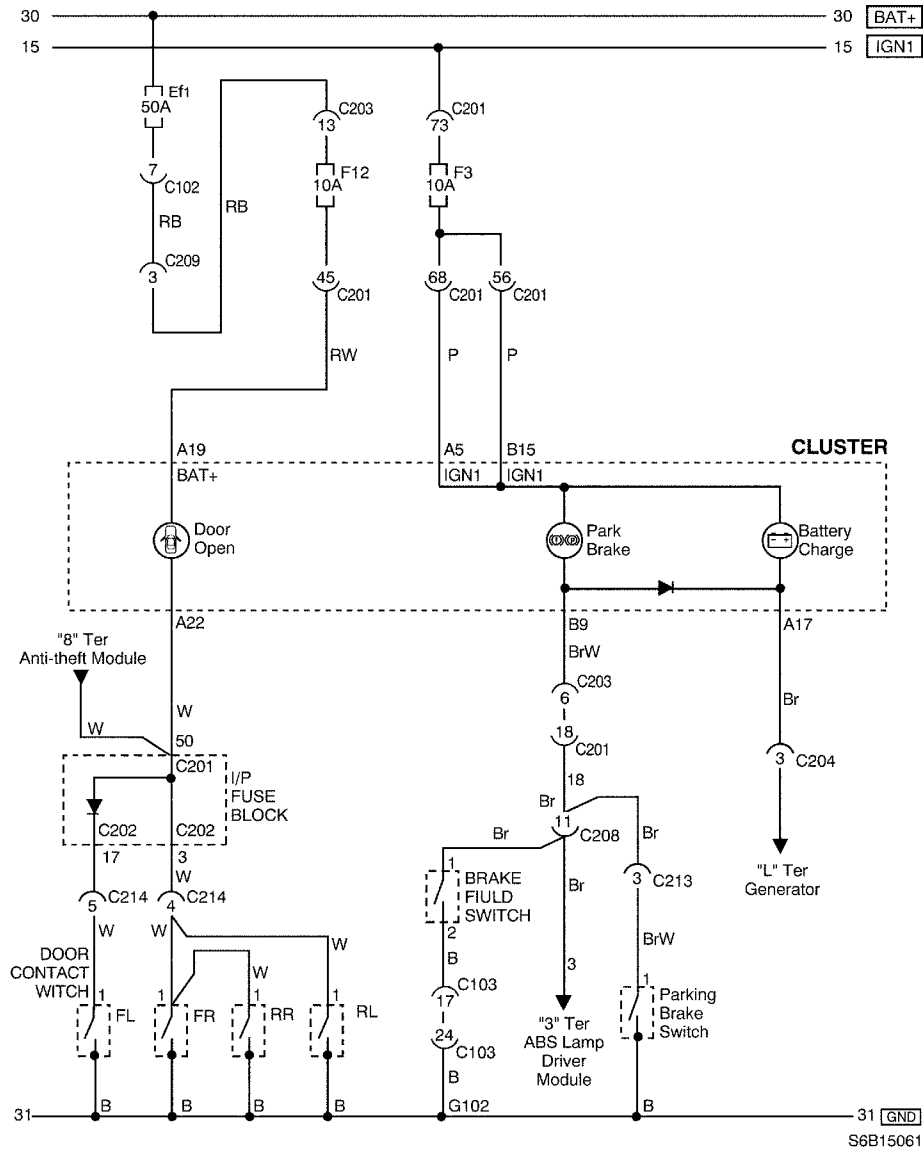

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C103 (32 Pin, Brown)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (20 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C208 (20 Pin, Yellow)	Front – I.P	Front TCM
C209 (4 Pin, White)	Front – I.P	Front TCM
G102	Front	Behind Left Headlamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

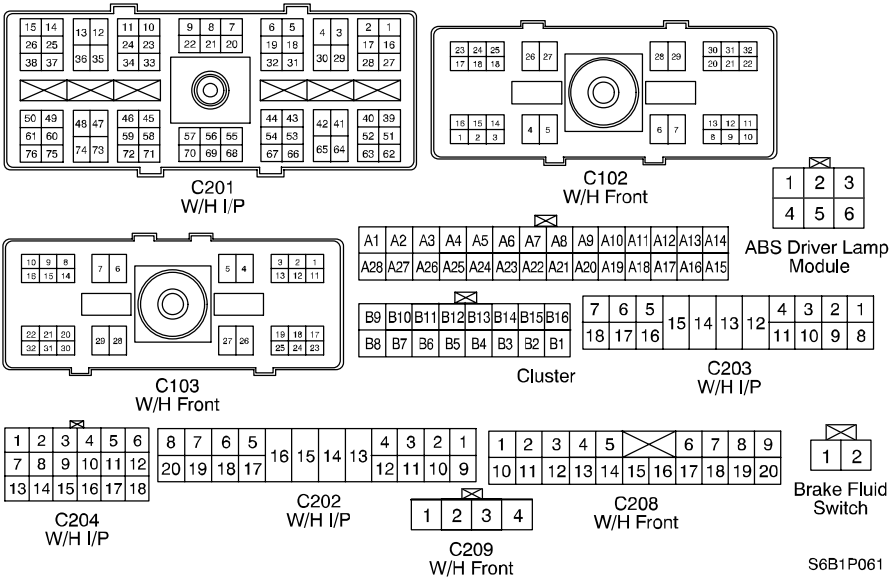


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

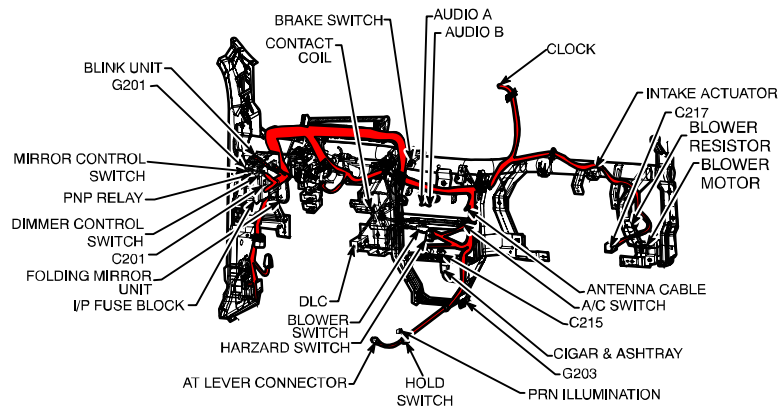


S6B12001

• W/H FRONT

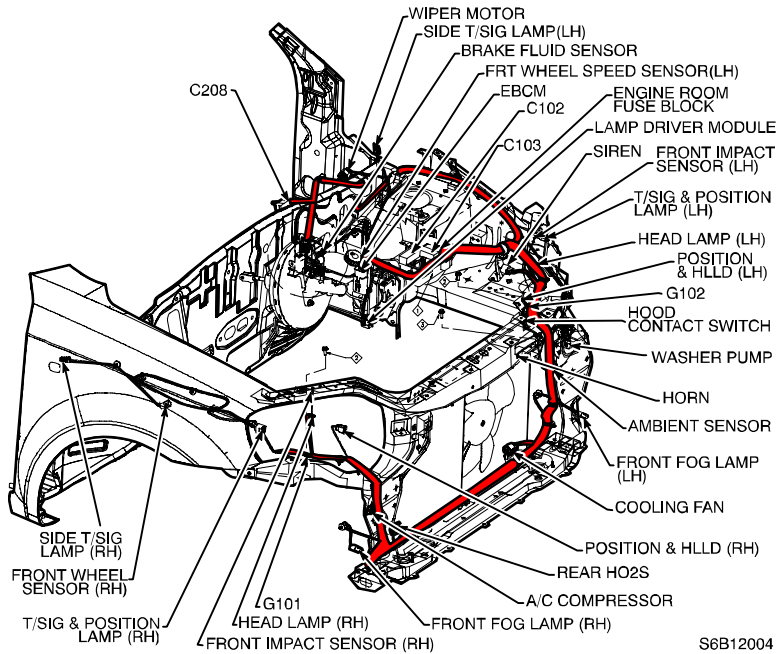


S6B12004

• W/H FLOOR

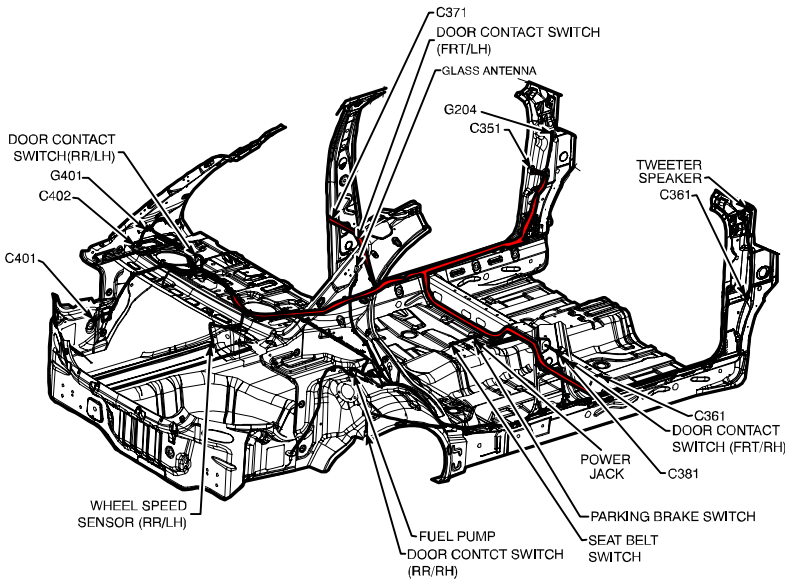

S6B12003


7) INDICATOR LAMP & ILLUMINATON

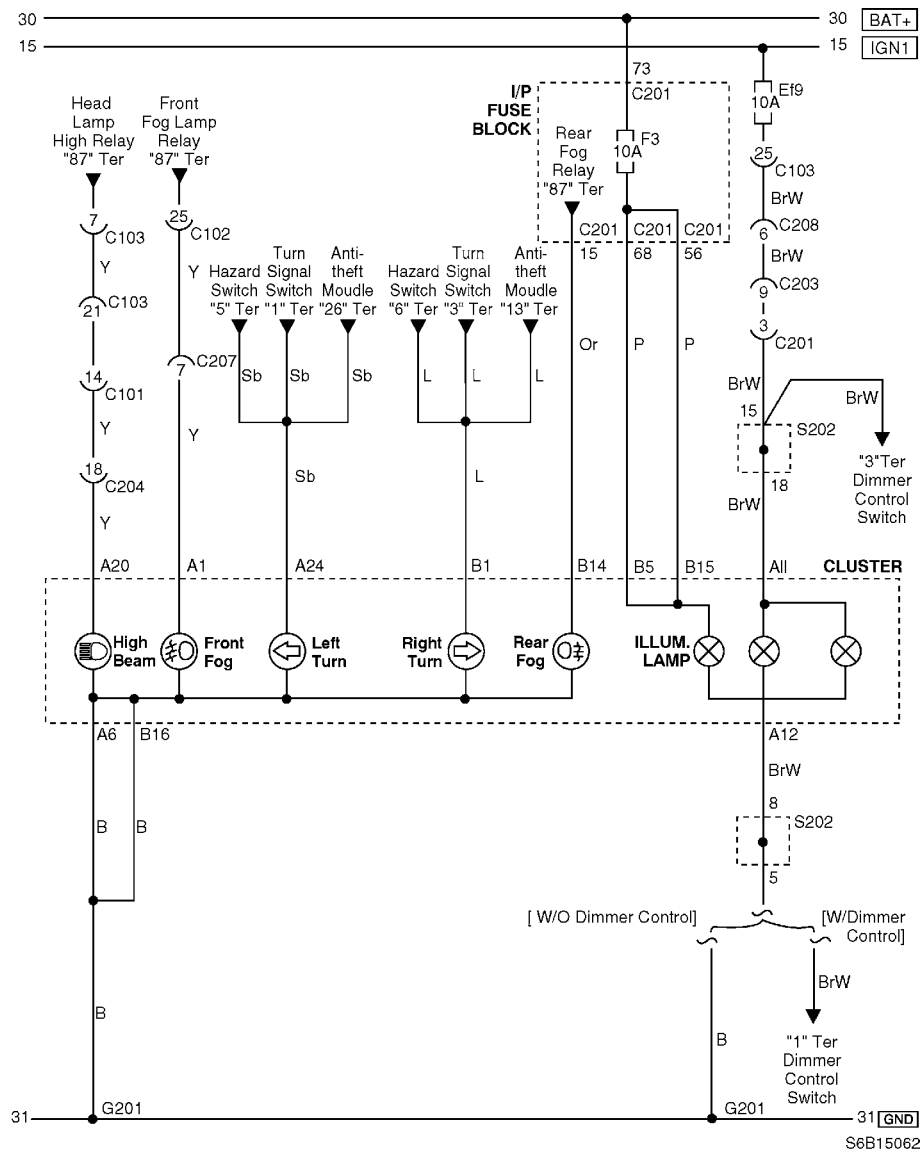

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C103 (32 Pin, Brown)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
S202	I.P	Behind Left Tie Bar
G201	I.P	Upper Mirror Control Switch

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

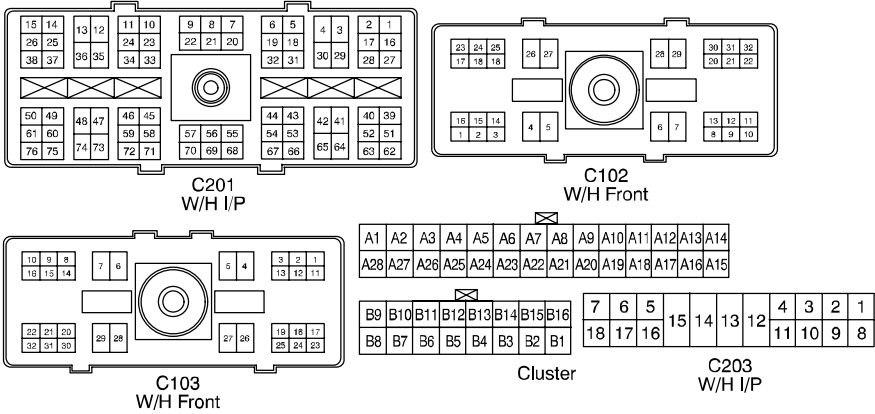


c. POSITION OF CONNECTORS AND GROUNDS

- W/H I/P

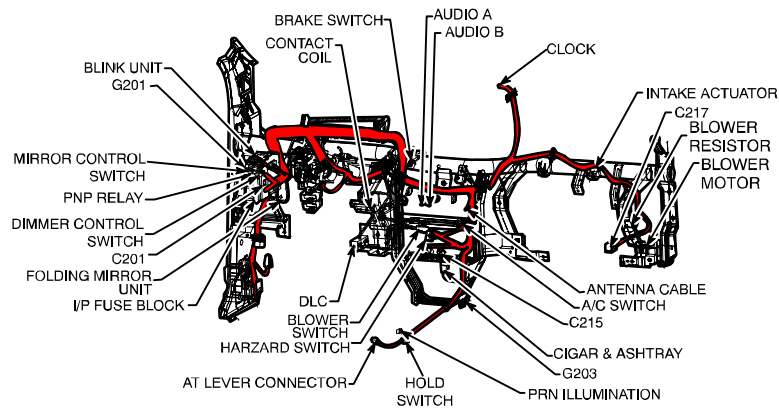

S6B12001


- W/H FRONT

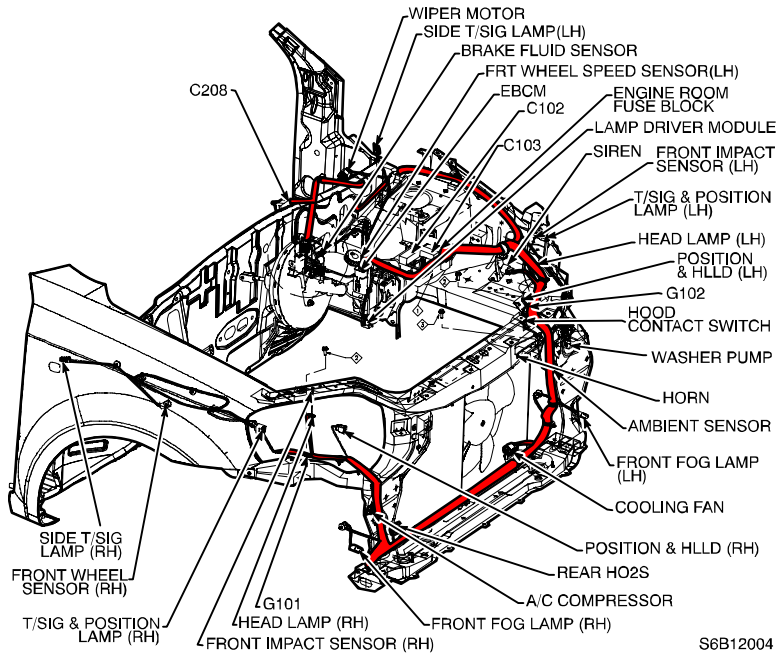

S6B12004

d. SPLICE PACK

S202

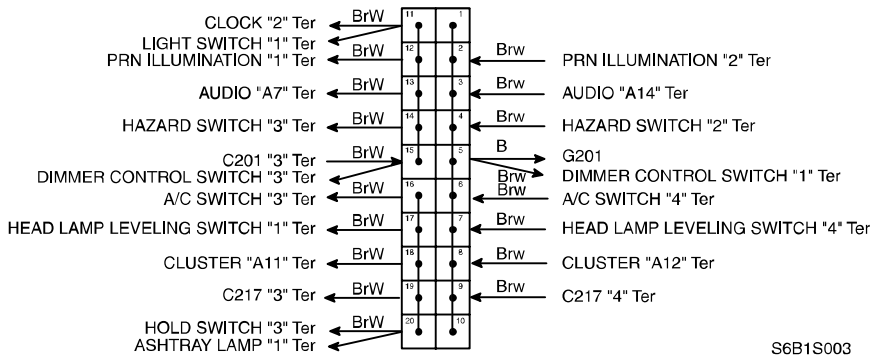

S6B1S003