




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C103 (32 Pin, Brown)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C208 (20 Pin, Yellow)	Front – I.P	Front TCM
G101	Front	Behind Right Headlamp
G102	Front	Behind Left Headlamp
G201	I.P	Upper Mirror Control Switch

The diagram illustrates the front views of four control panels and two switches:

- C201 W/H I/P:** A rectangular panel with a central circular gauge. It features multiple rows of numbered buttons (1-71) and two sets of three indicator lights at the top.
- C102 W/H Front:** A rectangular panel with a central circular gauge. It includes numbered buttons (1-32) and two sets of three indicator lights at the top.
- C103 W/H Front:** A rectangular panel with a central circular gauge. It features numbered buttons (1-30) and two sets of three indicator lights at the top.
- C208 W/H Front:** A rectangular panel with a central circular gauge. It includes numbered buttons (1-20) and two sets of three indicator lights at the top.
- Head Lamp Switch:** A small rectangular switch with a single indicator light.
- Light Switch:** A small rectangular switch with a single indicator light.


c. POSITION OF CONNECTORS AND GROUNDS

- W/H I/P

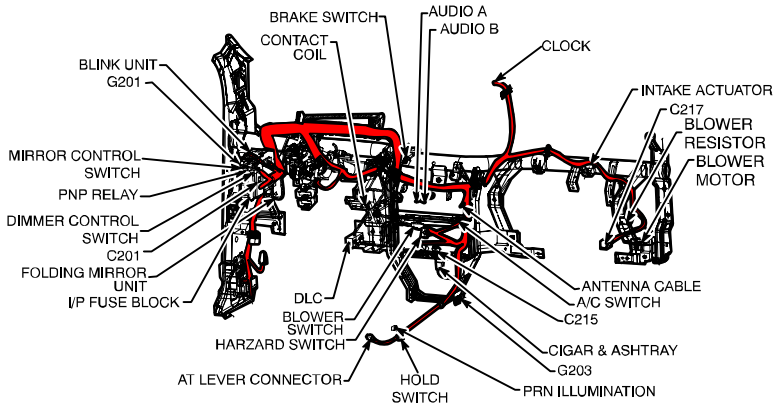

S6B12001

- W/H FRONT

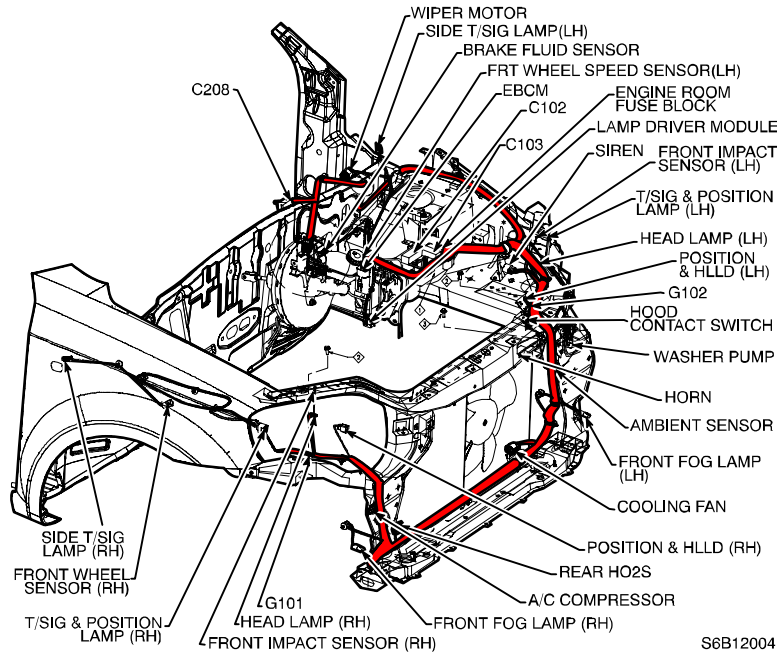

S6B12004