



29. IMMOBILIZER SYSTEM CIRCUIT

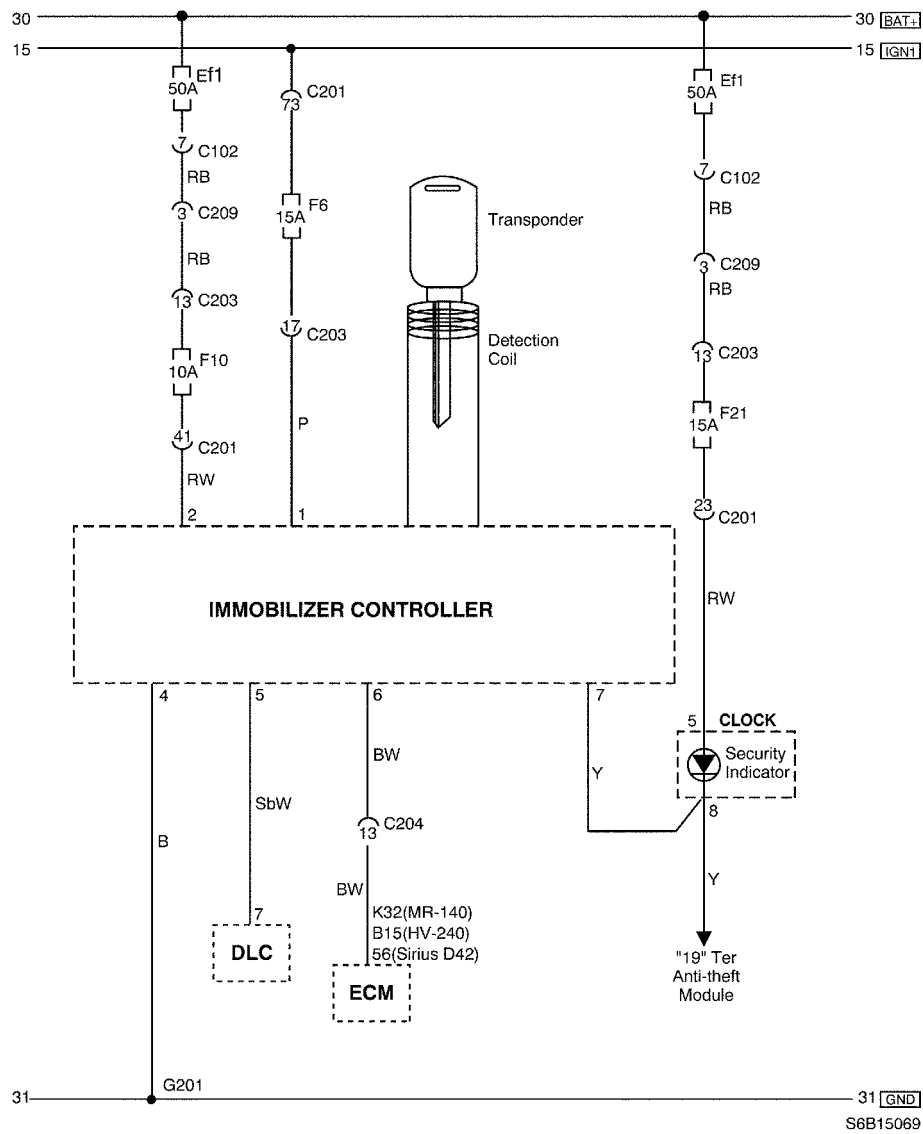

a. CONNECTOR INFORMATION


| CONNECTOR(No.)<br>(PIN NO. COLOR) | CONNECTING, WIRING HARNESS | CONNECTOR POSITION          |
|-----------------------------------|----------------------------|-----------------------------|
| C102 (32 Pin, Gray)               | Front – Engine Fuse Block  | Engine Fuse Block           |
| C201 (76 Pin, Black)              | I.P – I.P Fuse Block       | I.P Fuse Block              |
| C203 (18 Pin, White)              | I.P – I.P Fuse Block       | I.P Fuse Block              |
| C204 (18 Pin, Gray)               | I.P – Engine               | Upper Driver Leg Room       |
| C209 (4 Pin, White)               | Front – I.P                | Front TCM                   |
| G201                              | I.P                        | Upper Mirror Control Switch |

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

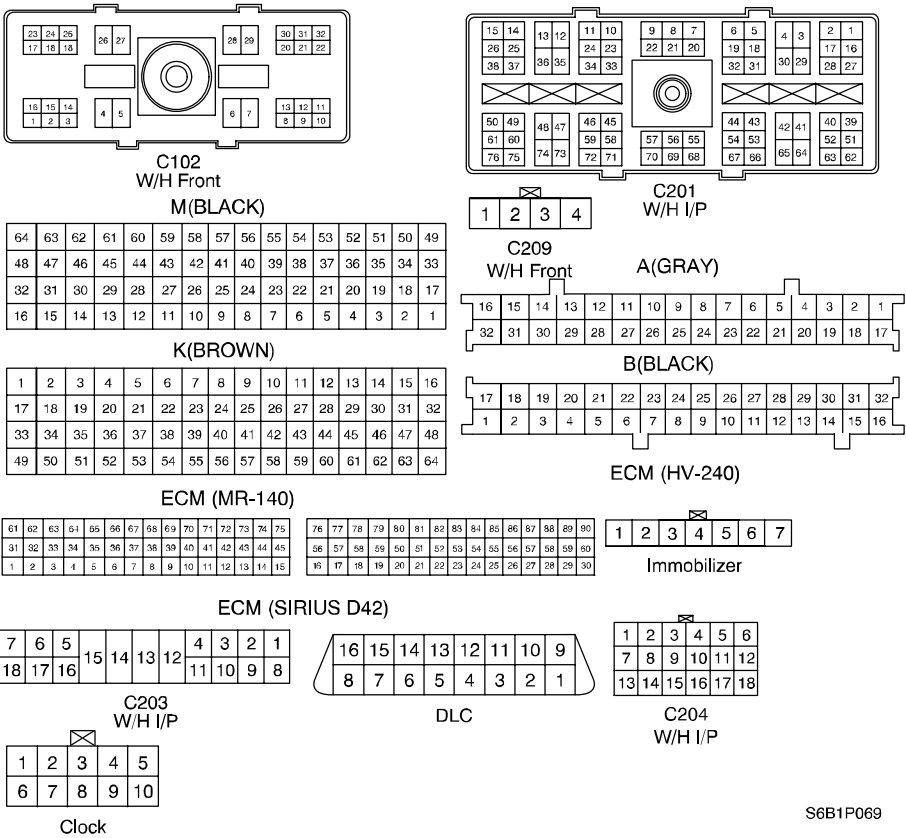


c. POSITION OF CONNECTORS AND GROUNDS

- W/H I/P

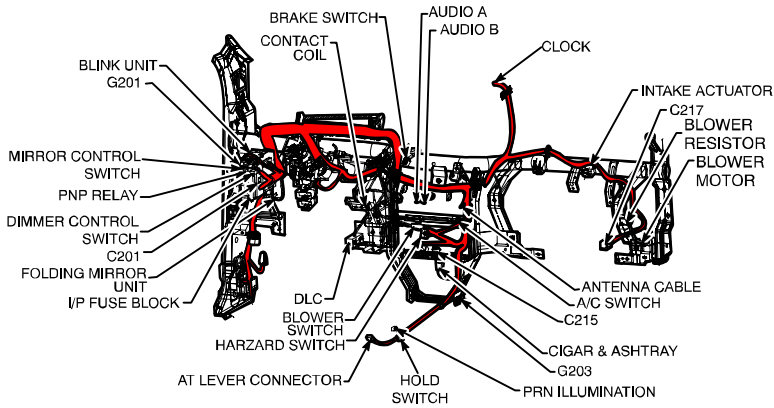

S6B12001

- W/H ENGINE

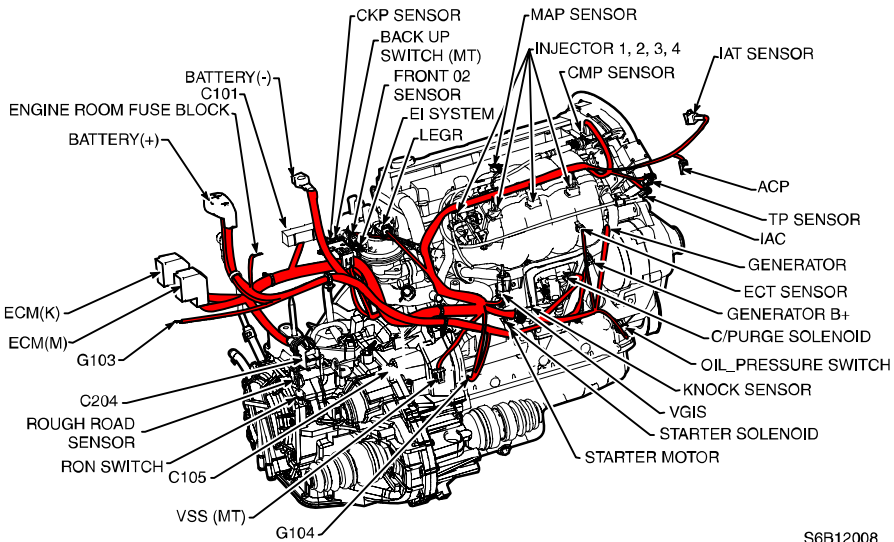

S6B12008