


SECTION 5

ELECTRICAL WIRING DIAGRAMS

1. STARTING & CHARGING SYSTEM


1) BATTERY, IGNITION SWITCH, STARTER MOTOR, GENERATOR & PNP SWITCH CIRCUIT

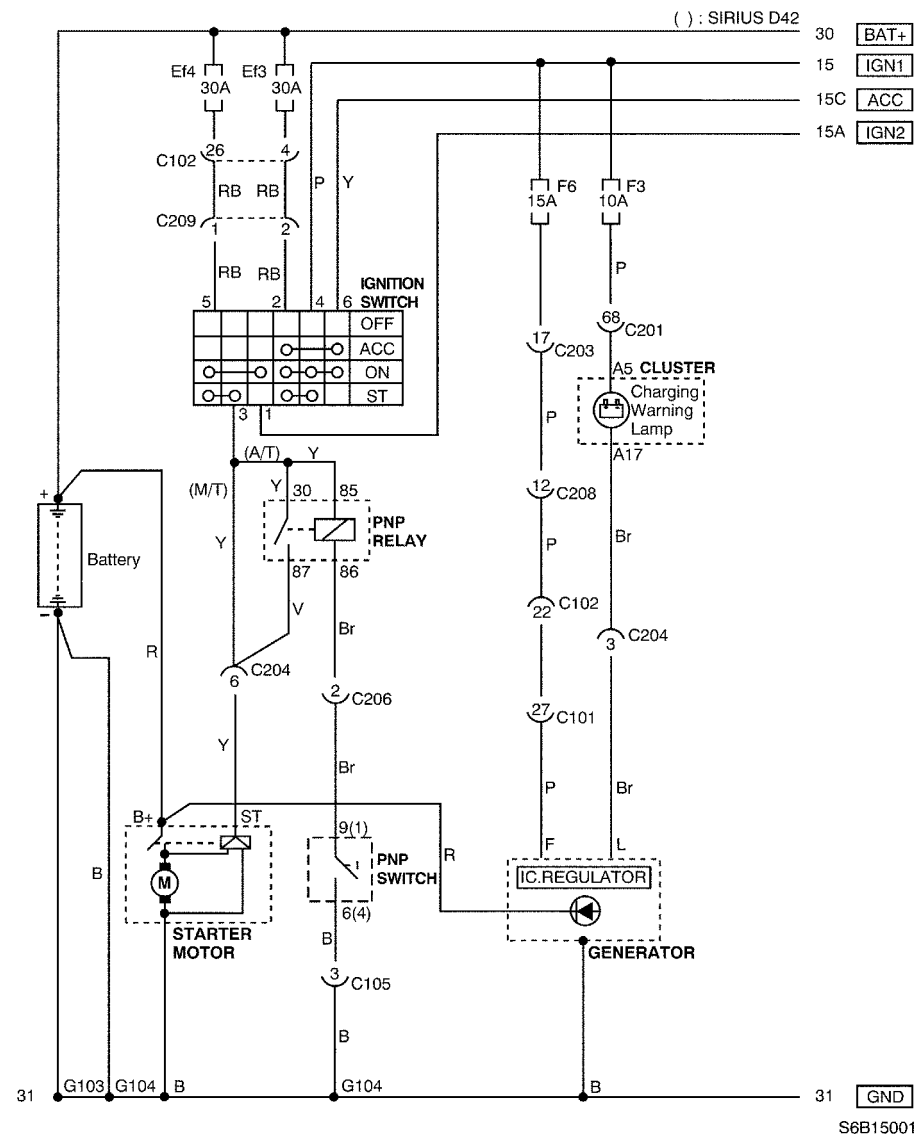

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (32 Pin, Black)	Engine – Engine Fuse Block	Engine Fuse Block
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (20 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C204 (18 Pin, Gray)	I.P – Engine	Upper Driver Leg Room
C206 (10 Pin, White)	TCM – I.P	Below TCM
C209 (4 Pin, White)	Front – I.P	Front TCM
G103	Battery	Below ECM
G104	Battery	Next to Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

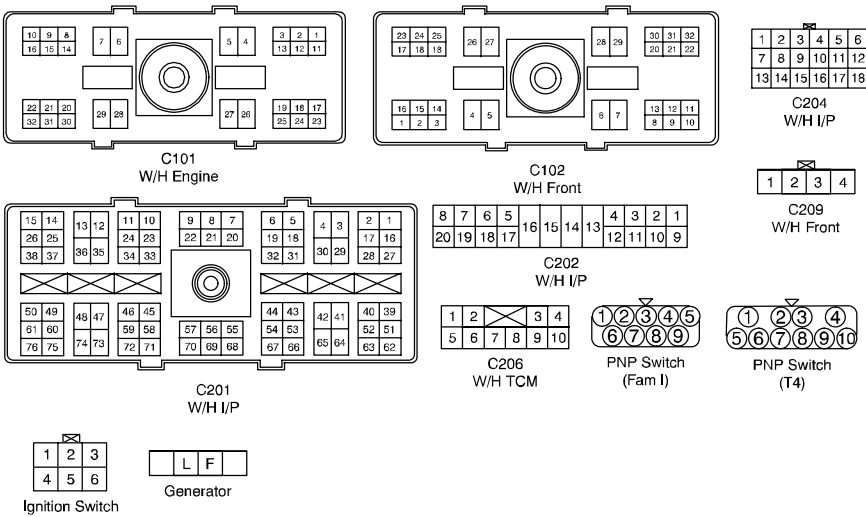


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE
- SIRIUS D42

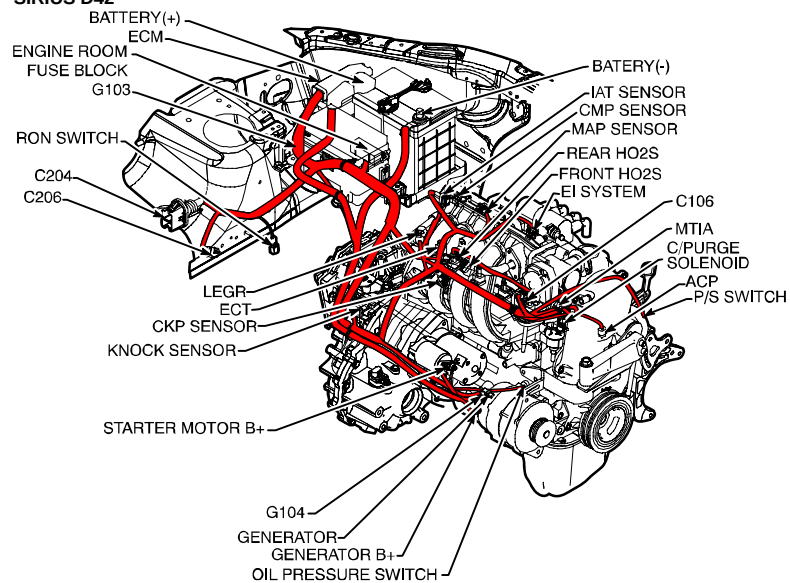


S6B12002

- HV-240

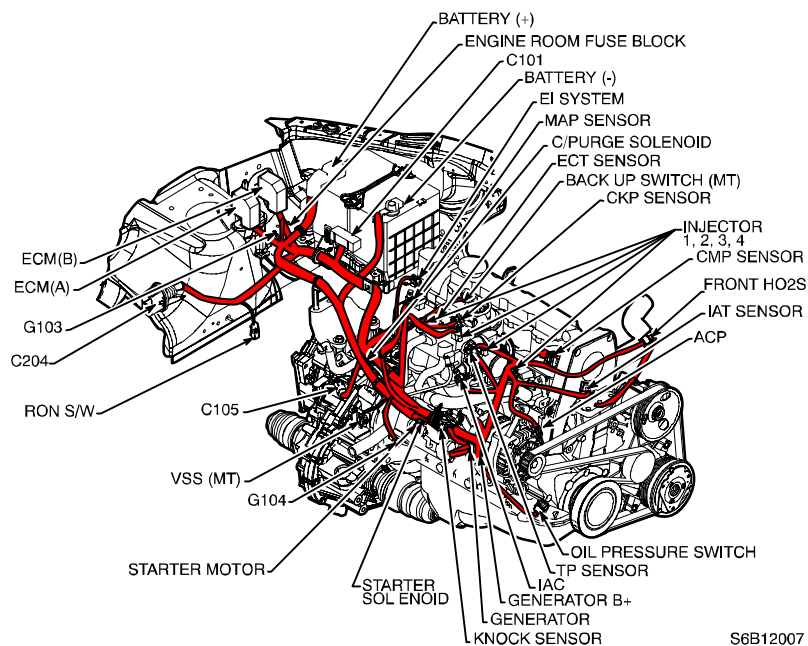

S6B12007

- MR-140

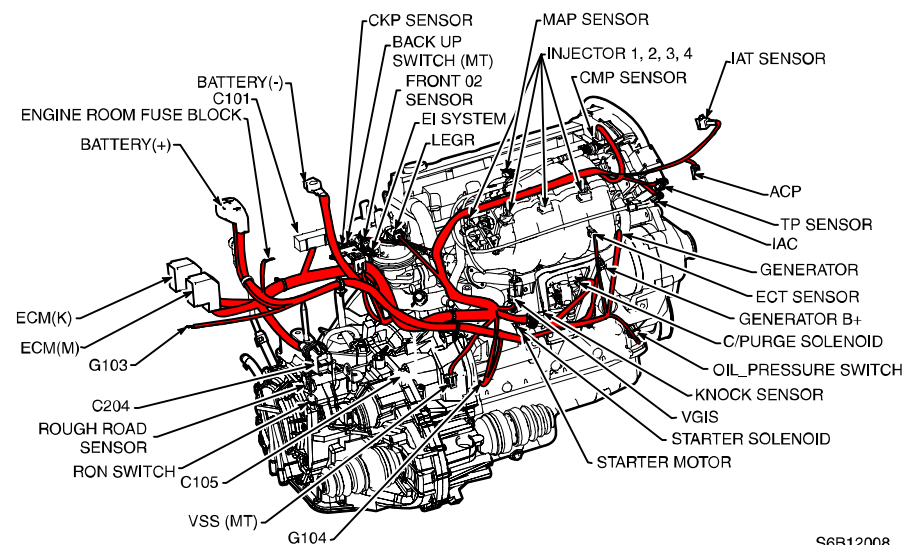

S6B12008