



22. CENTRAL DOOR LOCKING SYSTEM CIRCUIT

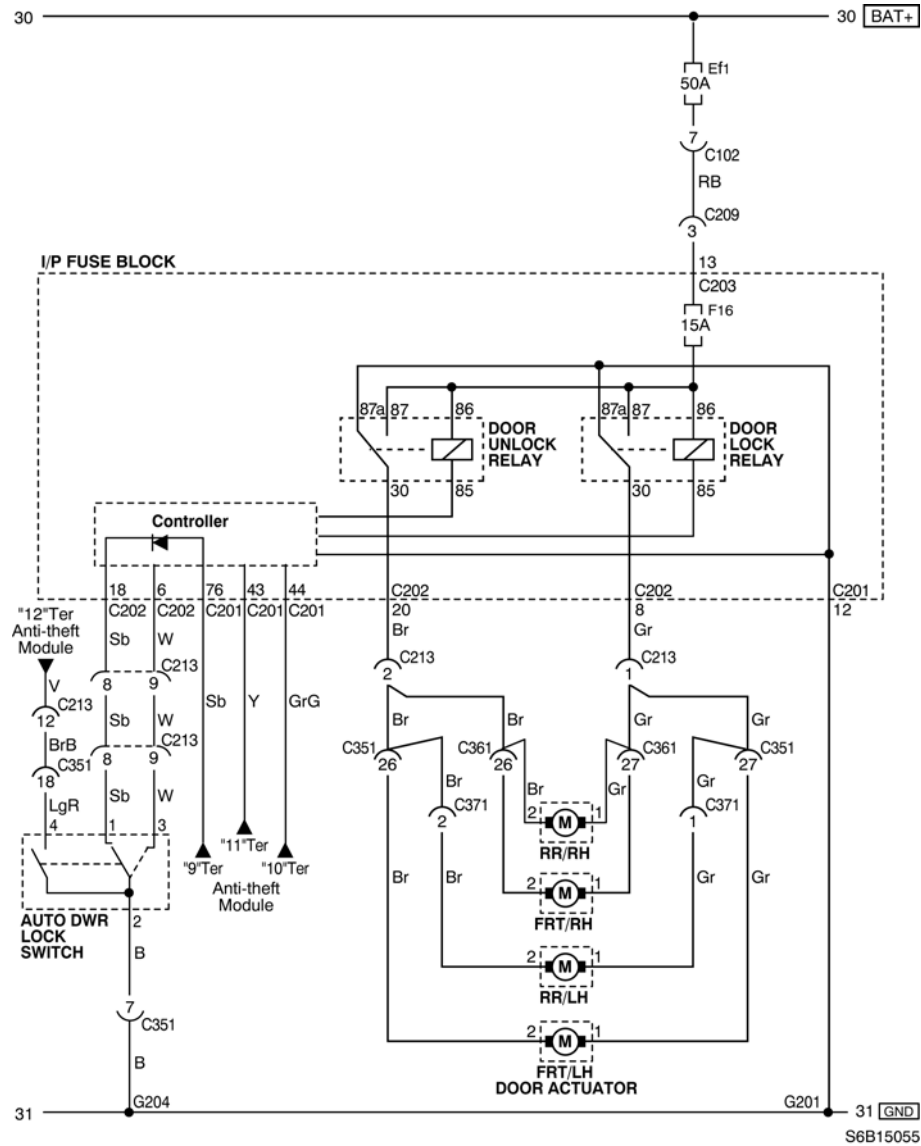

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (32 Pin, Gray)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (20 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C203 (18 Pin, White)	I.P – I.P Fuse Block	I.P Fuse Block
C209 (4 Pin, White)	Front – I.P	Front TCM
C213 (20 Pin, White)	I.P – Floor	Under Left A Pillar
C351 (29 Pin, White)	Floor – Front Left Door	Under Left A Pillar
C361 (29 Pin, White)	Floor – Front Right Door	Under Right A Pillar
C371 (6 Pin, White)	Floor – Rear Left Door	Under Left B Pillar
C381 (6 Pin, White)	Floor – Rear Right Door	Under Right B Pillar
G204	Floor	Under Right A Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

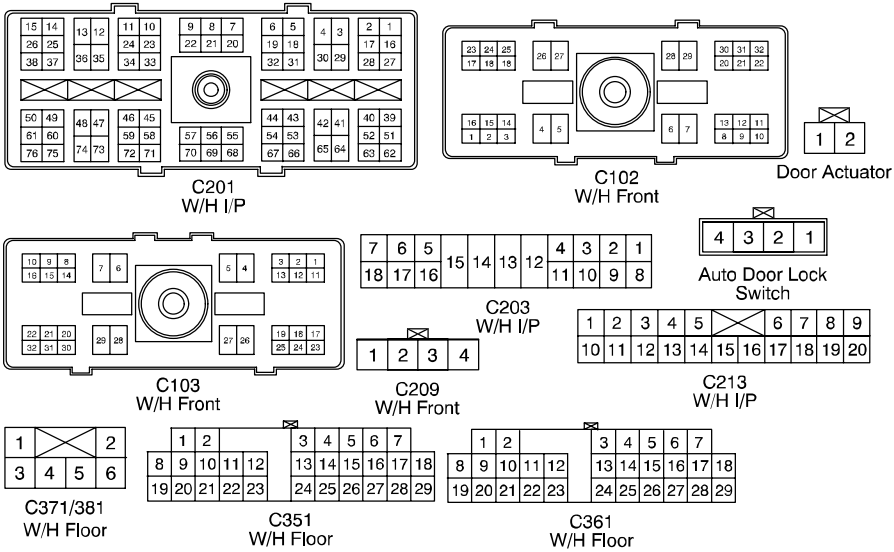


c. POSITION OF CONNECTORS AND GROUNDS

• W/H I/P

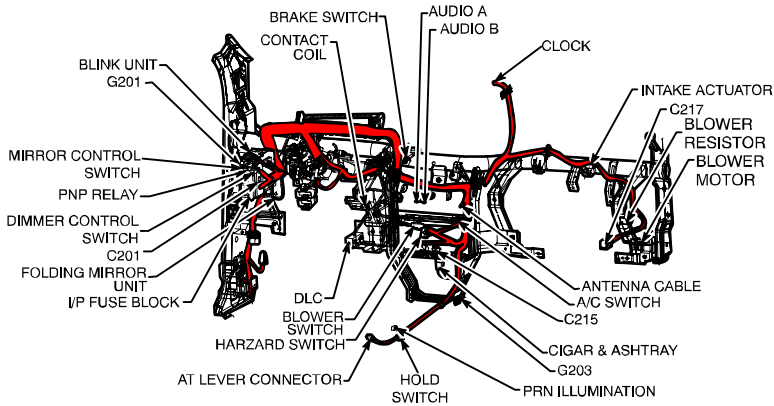


S6B12001

• W/H FRONT DOOR

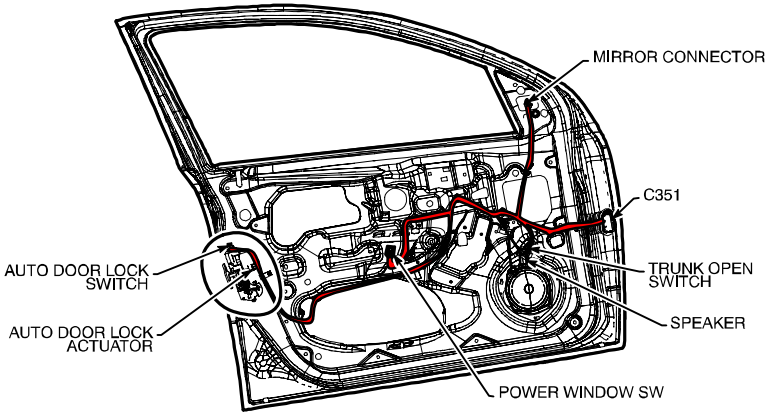


S6B12005

• W/H FLOOR

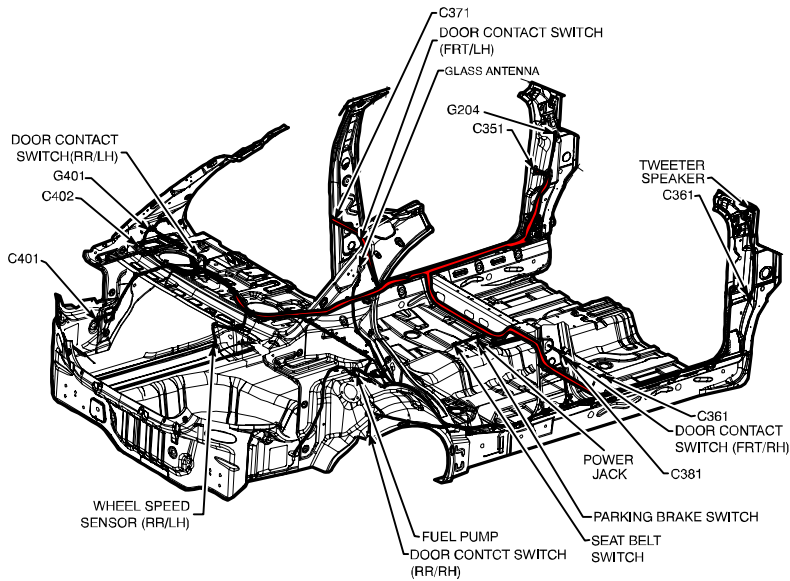

S6B12003

• W/H REAR DOOR

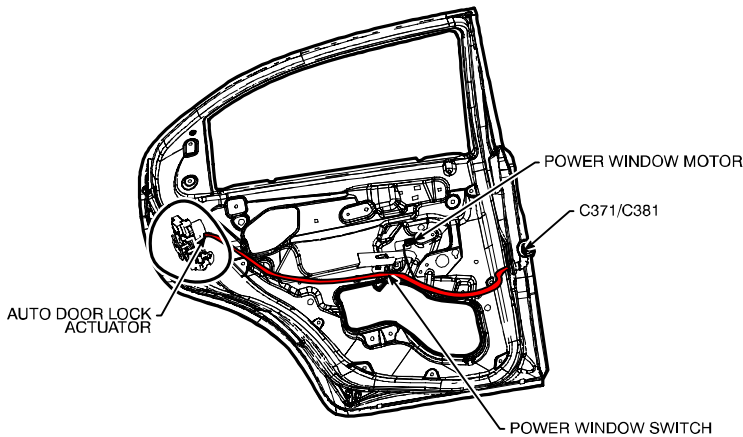

S6B12006